



NICHO INFERIOR GRETA REF. CZ 6961


MANUAL DE MONTAGEM INSTRUCCIONES DE ARMADO ASSEMBLE INSTRUCTIONS



FERRAGENS / HERRAJES


A		Cavilhas 6 x 30 Tacos Pegs
B		Parafuso 3,5 x 40 Tomilo 3,5 x 40 Screw 3,5 x 40
C		Parafuso União Tornillo de Unión Union Screw
D		Prego 10 x 10 Taxa 10 x 10 Nail 10 x 10
E		Cantoneira Acorrale Corner
F		Parafuso 3,5 x 14 Tomilo 3,5 x 14 Screw 3,5 x 14

①

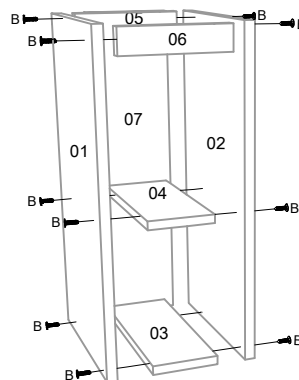


Fixar as laterais, prateleira, travessas e base utilizando os parafusos (B).

②

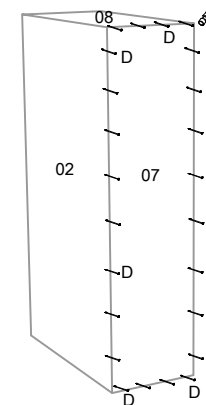

Fixar as costas do módulo utilizando o prego (D).

③

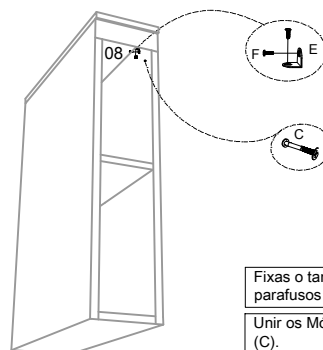

Fixar o tampo do módulo utilizando os parafusos (F).

Unir os Módulos utilizando os parafusos (C).